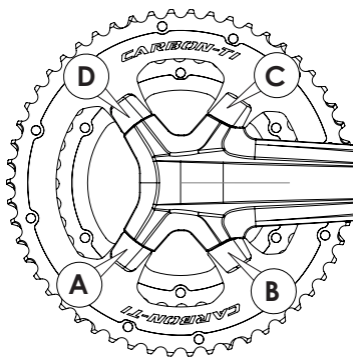


**X-COVER DA9200****ITALIANO****PRIMA DI INIZIARE**

Viti fissaggio corona sagomate realizzate mediante lavorazione CNC in AL7075, kit specifico per pedivelle Shimano DuraAce 9200 12s, DuraAce 9200-P 12s, Ultegra FC-R8100 e FC-R8100-P.

Non è compatibile con modelli differenti (es. DuraAce 9100, Ultegra, 105...)

**INSTALLAZIONE**

Per il montaggio munirsi della chiave per il serraggio delle viti Torx T30.

Gli elementi presentano una marcatura che ne identifica il modello (A, B, C, D);

prestare attenzione a posizionarli seguendo lo schema indicato in figura.


Applicare una goccia di frenafilietti medio sul filetto delle viti di fissaggio e serrarle con una coppia di serraggio di 6 Nm; si sconsiglia di applicare grasso.

**X-COVER DA9200  
è 100% Made in Italy**

**X-COVER DA9200****ENGLISH****BEFORE STARTING**

X-Cover DA9200 are AL7075 CNC machined chainring fixing bolts, this specific kit is suitable for DuraAce 9200 12s, DuraAce 9200-P 12, Ultegra FC-R8100 and FC-R8100-P cranksets.

It is not compatible with different models (e.g. DuraAce 9100, Ultegra, 105...)

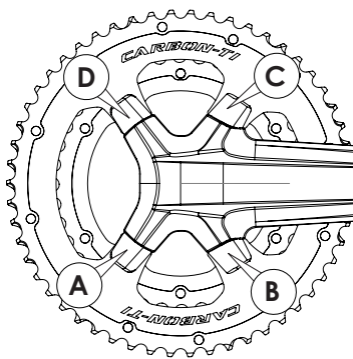**INSTALLATION**

Use a key for tightening the Torx T30. The covers have a laser marking that identifies the model (A, B, C, D); pay attention to positioning following the scheme as in the figure.

Apply a drop of medium-strength treadlocker on the threads of the fixing bolts and tighten them with a 6 Nm tightening torque; it is not recommended to apply grease.

**X-COVER DA9200**  
**is 100% Made in Italy**